

Installation instruction of mosquito net




1. Through the open window, insert the net frame into the window aperture from the outside. Make sure that the brackets are on the inside.



2. Behind plastic handles push the net into the window frame until it presses tightly against the sealing rubber.



3. Secure the mosquito net to the frame with the four brackets by turning them 90 ° in a row.

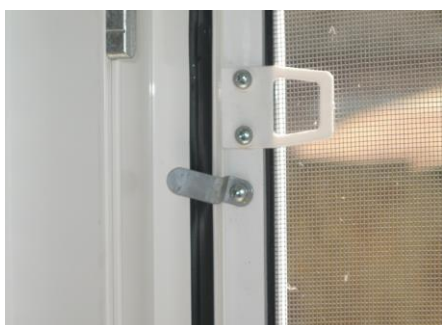

4. A mosquito net is installed.