


## Instruction for determining dimensions of roller, pleated and door mosquito net

### Determining width dimensions

- Measure the inside width of the window opening from the rubber bead at one side to the rubber bead at the opposite side.
- Please measure your window with the precision up to 1 mm.

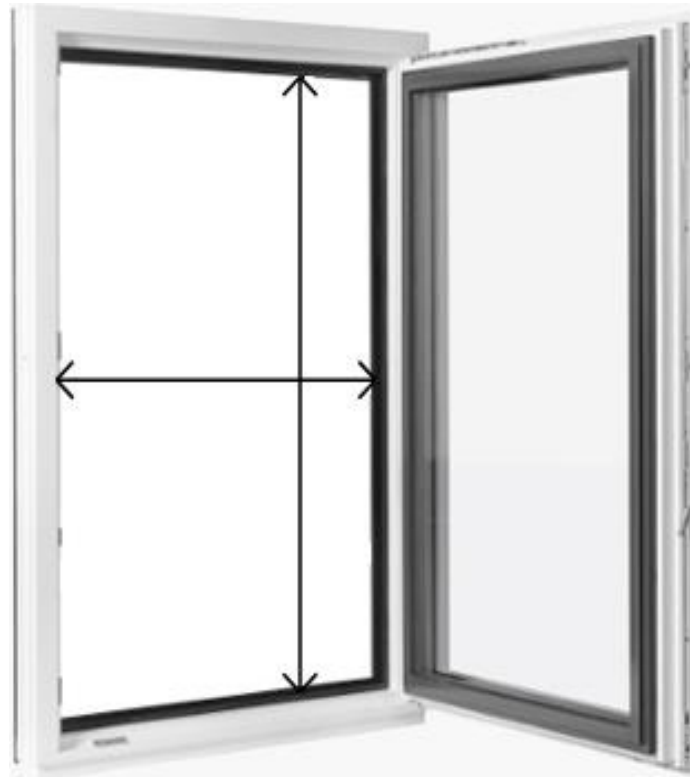

### Determining height dimensions

- Measure the inside drop of the window opening from the top rubber bead to the bottom rubber bead.
- Please measure your window with the precision up to 1 mm.

Please, consider that the window frame width from the outside has not to be less than 38 mm.

