

Installation instruction of roller blinds “SCREEN” (on the window frame)




1. Attach the cornice to the window frame and mark both sides.



2. Screw the blind fasteners to the window frame.



3. Attach the blinds into the clips. The bracket is locked when a “click” is heard.

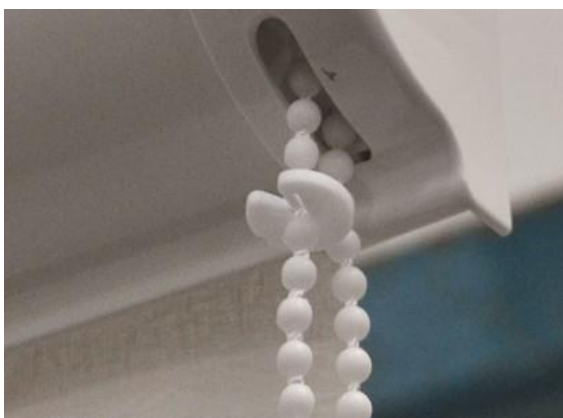

4. Use the chain limiter to adjust correctly the upper and lower position of the fabric.