


Installation instruction of roller blinds “SCREEN” (on the wall)



1. Place the cornice firmly horizontally on the wall and make markings on both sides of the cornice where you will attach the brackets.



2. Place the brackets on the markings and mark points in the mounting holes, where the mounting brackets will be placed.

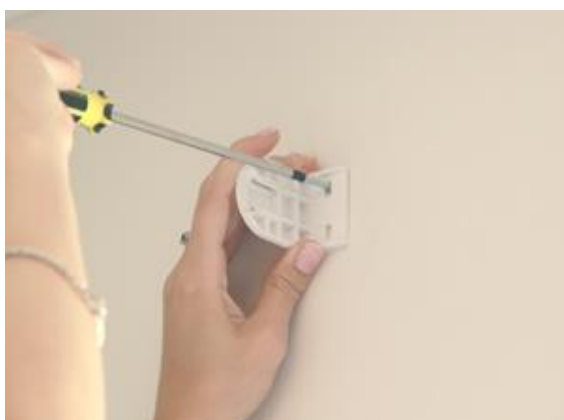


3. Screw the brackets to the wall through the mounting holes.



4. Attach the cornice in the brackets.



5. The bracket is locked when a “click” is heard.

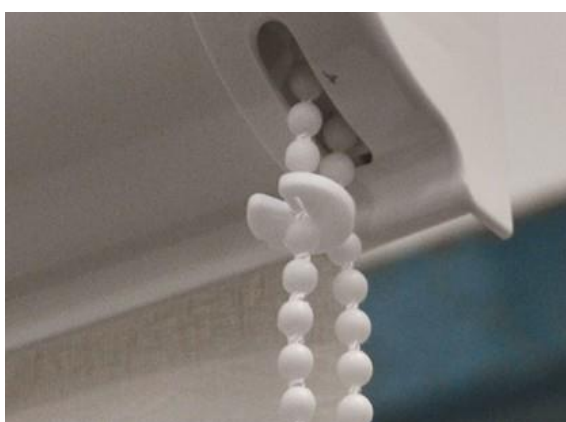

6. Use the chain limiter to adjust correctly the upper and lower position of the fabric.