

Installation instruction for vertical blinds (in the window aperture)



1. Attach the cornice to the ceiling and mark both sides.




2. Make as many marks along the length of the cornice, as there are clips for installing the blinds.




3. Choose the right dowel and drill if it is necessary. Screw the clips in the marked places to the ceiling or in the window aperture.



4. Attach the cornice to the clips.

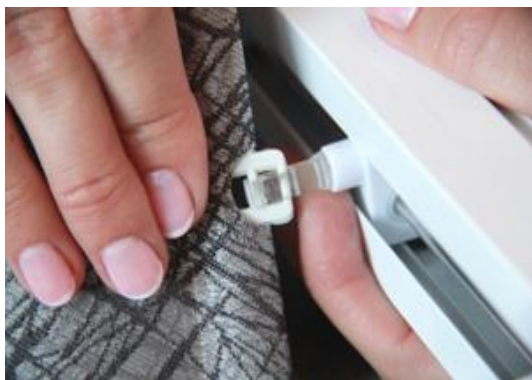

5. Attach the slat holder hooks to the cornice.

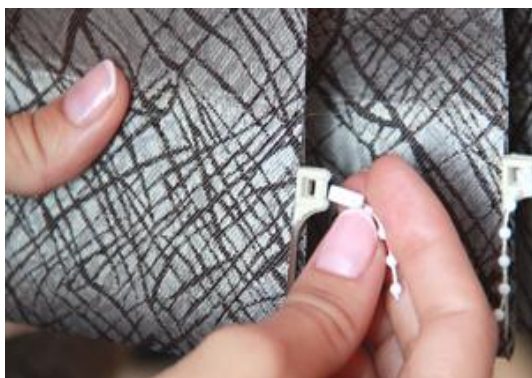

6. Insert the distance chain between the slats.