


Installation instruction of vertical blinds (on the wall)



1. Attach the cornice to the wall and mark both sides.

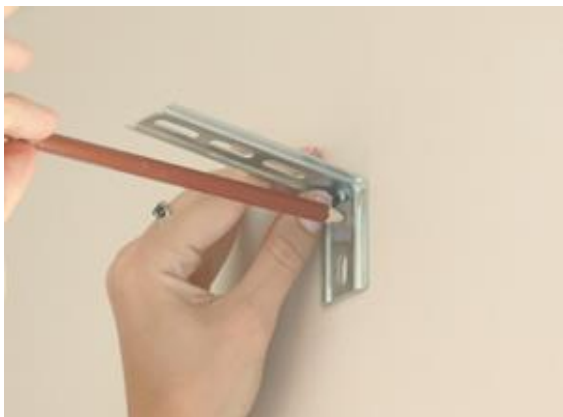

2. Make as many marks along the length of the cornice, as there are clips for installing the blinds.



3. Attach the clips with brackets.




4. Choose the right dowel and drill if necessary. Screw the clips in the marked places to the wall.



5. Attach the cornice to the clips.



6. Attach the slat holder hooks to the cornice.

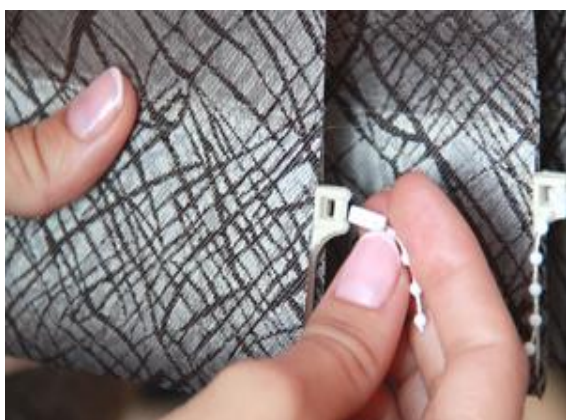

7. Insert the distance chain between the slats.